

CONTOUR ShowerDec®

Create a wet floor area

Quick and simple to install, our range of ShowerDec® floor formers enable bathrooms to be used as complete, level access wet floor areas. Creating falls in the floor of a traditional wet floor area is difficult and time consuming. Using the ShowerDec® floor former avoids that inconvenience and those additional labour costs, providing a perfect and trouble free level access showering area.

Practical for wooden and solid floor situations, and only 22mm thick, ShowerDec® is concealed underneath the vinyl floor covering once installed, guaranteeing the bathroom to be used as a complete, wheelchair friendly, wet floor environment without looking clinical.



Pre-formed

The pre-formed gradient incorporated into the top surface of ShowerDec® removes the necessity of having to create your own falls within the floor. All enclosures feature trimmable corner blocks and rise and fall hinges for effortless door opening.

- Only 22mm thick, easily locates in wooden or solid floor environments.
- Level access guarantees wheeledchair entry.
- Pre-formed gradient 1:40 to the drainage position.
- No need to create difficult falls.
- Cost effective, reduces valuable labour and disruption time.
- Quick and simple to install, easily achieves cost savings compared with tiled or solid surfaces.
- Trimmable by upto 30mm. If trimming by 30mm for example, it would be necessary to take 15mm off either side.
- No modifying of joists required.
- Lifetime guarantee.
- Can be used with mosaic tiles if preferred. A gully adaptor is required when using mosaics, see page 90 for details. Aquaproofing tanking membrane would also be needed, see page 91.
- Light in weight whilst combining exceptional strength.
- Flat formed bottom surface to assist with installation.
- Enclosures integrate a corner block to overcome floor coving and rise and fall hinges for effortless door opening.
- Manufactured in the UK.
- ShowerDec®s are not handed.



Suitable for wooden floors



Suitable for screeded floors



Below ground tray



Yes



Suitable for gravity waste




Suitable for pumped waste




Proudly Made in the UK

CSD810x810

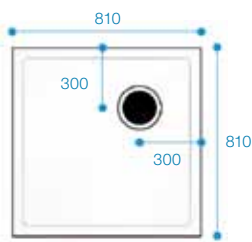


Not handed
Reference Code: CSD810x810
For enclosure options see ED900x900, page 10

CSD910x910

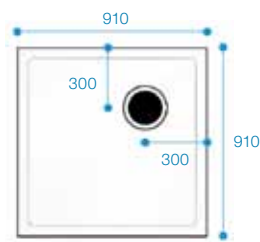


Not handed
Reference Code: CSD910x910
For enclosure options see ED900x900, page 10

CSD1000x1000

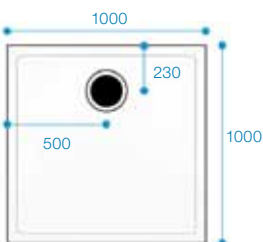


Not handed
Reference Code: CSD1000x1000
For enclosure options see ED1000x1000, page 10

CSD1200x1200

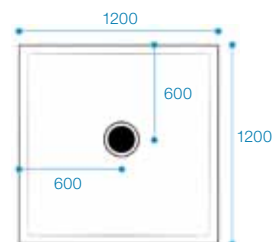


Not handed
Reference Code: CSD1200x1200
For enclosure options see ED1200x1200, page 10

CSD1300x800

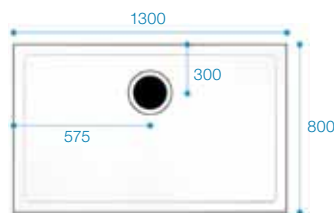


Not handed
Reference Code: CSD1300x800
For enclosure options see ED1300x800, page 11

CSD1400x900

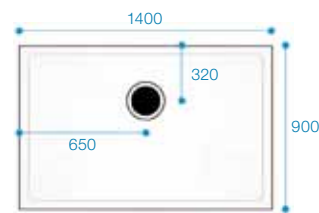

Not handed
Reference Code: CSD1400x900
For enclosure options see ED1400x900, page 11

CSD1500x800

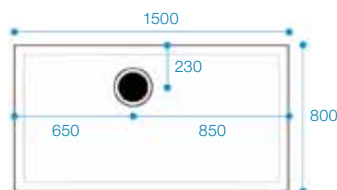

Not handed
Reference Code: CSD1500x800
For enclosure options see ED1500x800, page 11

ShowerDec® Installation

The ShowerDec® range shares the same functionality as our Eco-dec® range with the exception of a ShowerDec® being 22mm thick.

For shower enclosure options please refer to the Eco-dec® pages or our Made to Measure enclosure options on page 20-23.

Installing a ShowerDec® could not be easier. Remove an amount of the existing floor to accept the 22mm thick ShowerDec®.

When siting in a wooden floor, the ShowerDec® would rest on the existing joists. If the floorboards are 18mm deep, it would be necessary to make the remaining exposed floor and the ShowerDec® absolutely level using plywood.

Fill the joint using a resin car body filler or similar to form a strong bond between the ShowerDec® and the floor, your vinyl sheet flooring can now be laid using an appropriate adhesive as recommended in the manufacturers instructions.

Prepare the floor covering to accept the gully cover and to receive the welded corner joint, the appearance of the bathroom should soon resemble a perfect wet floor area.

Waste Options

Supplied as standard with a TSG52, 2 piece, 50mm water seal gravity waste gully, see page 104 for more details.

PRIMO shower waste pump and USG1-WH available if using in a waste pump situation, see page 92 for more details.



Shower-Dec®

- Create a level access wet floor area
- Only 22mm thick
- Quick & simple to install
- Not handed